





<u>Belt/Disk Sander</u>

NEVER LEAVE SANDERS RUNNING UNATTENDED.
ALWAYS MAINTAIN SECURE FOOTING AROUND THE SANDER.
NEVER WEAR GLOVES, LOOSE CLOTHING, JEWELRY, NECKTIES, OR LONG LOOSE HAIR
NEAR SANDERS.
 NEVER LEAN OVER OR REACH UNDER RUNNING SANDERS.
NEVER POWER SAND METALS, INCLUDING NAILS, SCREWS, OR OTHER FASTENERS IN
THE WOOD. (Sparks can ignite air borne sawdust. Countersink fasteners below wood
surface before sanding)
NEVER POWER SAND PAINTED WOOD OR OTHER MATERIALS IN THE DESIGN SHOP.
ALWAYS RUN DUST COLLECTOR WHEN SANDING.
1. Configuration: combination belt and disk sander
2. Action: rough sands and shapes
3. Adjustments:
a. Belt swivels from horizontal to vertical. DO
NOT CHANGE WITHOUT PERMISSION OF SHOP PERSONNEL.
b. tables tilt 0\45°
c. Miter gauge can be used
4. Safety: (also see above)
a. Hold wood firmly, always be able to hold against the direction of sander.
b. Never approach from attacking angle.
c. Be aware of belt tracking and tension. Shut off machine and alert shop
personnel if belt tracks wrong, especially if sparks are created.
d. Do not use if belt or disk is loose or torn. Alert shop personnel.
e. Keep hands away from abrasive surfaces, especially near intake gaps.
f. Use tables to support material when sanding against a vertical belt or disk.
g. Hold wood securely. Loose wood will be thrown violently. h. Do no stand in line with out feed of belt. Do not let others stand in line of
the out feed.
i. Never sand pieces too small to hold safely.
I. Sand with the grain whenever possible.
m. Keep work moving. Do not over sand in one place.