



SAW (Chop saw)



## NEVER CUT FREEHAND WITH MOUNTED CIRCULAR SAWS NEVER PLACE HANDS CLOSER THAN 6" TO A MOVING BLADE

- 1. Configuration: circular blade mounted on single action arm
- 2. Cutting Action:
  - a. Blade swings down in chopping motion
  - b. Wood is held in place while blade is moved
- 3. Adjustments:
  - a. Compound Miter Saw blade swivels for miter cuts
  - b. Compound Miter Saw blade tilts for bevel cuts
- 4. Cuts:
  - a. Crosscut and miters in long narrow boards
  - b. Compound Miter Saw cuts compound miters in long narrow boards
- 5. Safety:
  - a. Firmly fix wood against table and fence: never cut freehand.
  - b. Hold wood with left hand, cut with saw in right hand.
  - c. Slow steady feed: DO NOT TRY TO CUT TOO QUICKLY.
  - d. Always check for square.
  - e. Tilted blade bevel cuts are most prone to binding and thus most dangerous.
  - f. Always return saw to its full start position after the cut.
  - g. Never "gang cut." Never cut more than one piece at a time.